

# EUTECTIC PLATES for MAILLON

3/3/2023 rev0



- Brand: MELFORM
- Country of origin: ITALY
- Customs code: 39231090
- Compatible with food contact
- Exclusive MELFORM design
- Technology: rotational
- Warranty: 24 months
- Non-toxic internal liquids
- Equipped with comfortable grip handle for easy handling.
- Guaranteed for use from: **-30°C to +85°C.**
- Fully recyclable at the end of its operational life.

## MANUFACTURING MATERIALS


<b>Polyethylene</b>	outer shell	<b>Eutectic mixture</b>	Internal content
---------------------	-------------	-------------------------	------------------

Model	Code	EAN code	Dimensions (mm)	Temperature eutectic	Thermal energy (Wh)	Weight (kg)
Eutectic plate Fresh	PEML0001	8022949018764	360x270xh39	+3°C	180	2,9
Eutectic plate Super fresh	PEML9001	8022949093198	360x270xh39	-12°C	155	2,9
Eutectic plate Frozen	PEML0002	8022949018771	360x270xh39	-21°C	60	2,9
Eutectic plate Frozen Plus	PEML9008	8022949136833	360x270xh39	-21°C	135	2,9

## FEATURES EUTECTIC PLATES

	<b>FRESH</b> <b>+3°C</b> <b>180 WH</b>	<b>SUPERFRESH</b> <b>-12°C</b> <b>155 WH</b>	<b>FROZEN</b> <b>-21°C</b> <b>60 WH</b>	<b>FROZEN PLUS</b> <b>-21°C</b> <b>135 WH</b>
<b>MAILLON</b>				

## TECHNICAL DATA (mm)

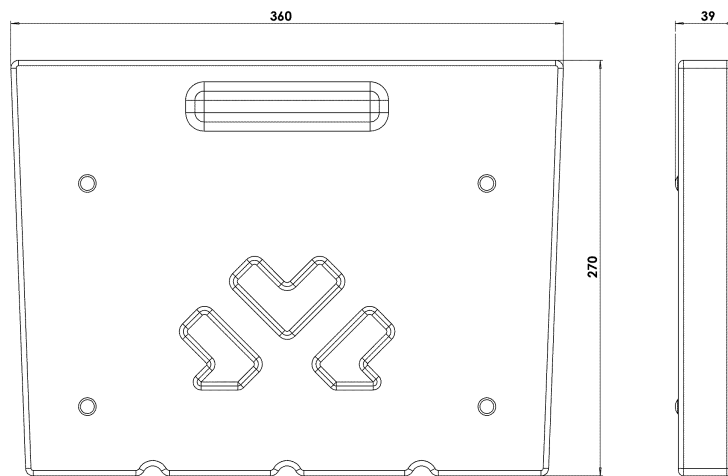

## INSTRUCTIONS FOR PROPER USE OF MELFORM EUTECTIC PLATES

- Handle the plate for a short time. Do not keep the plate frozen in contact with body or soft tissues as there is a risk of cold burn. Keep the plate away from the body and out of the reach of children.
- Hold the plate upright with a cap in the upper area, or horizontally with the cap facing up. Do not place and use the plate with the cap facing down.
- Do not damage the plate and do not remove or tamper with the cap.
- Do not use the product if damaged. In case of liquid leakage, isolate the plate for subsequent disposal.
- At low temperatures and with the solidified liquid, the plate becomes very sensitive to shocks. Handle the plate very carefully.
- In case of contact of the liquid with food, dispose of the product.
- In case of ingestion of liquid, contact the nearest emergency room immediately. In case of contact of the liquid with the skin, rinse thoroughly with water.

### How to freeze plates:

- Place the plate in a freezer horizontally with the cap facing up or vertically with the cap in the upper area.
- Do not place the plates on top of each other but leave a space of at least 4 cm between one plate and the other to allow the passage of air.
- The plate is properly conditioned when the liquid inside is totally frozen. Shake the plate for verification. Do not use the plate before it is fully conditioned.
- Conditioning the plate according to the instructions below:
  - We recommend conditioning the **fresh plate +3°C** for 24 hours at a temperature of at least **-10°C**;
  - We recommend conditioning the **super fresh -12 °C** for 24 hours at a temperature of at least **-20 °C**
  - We recommend conditioning the **frozen / frozen plus -21 °C** for 24 hours at a temperature of at least **-30 °C**.